



# Frame Alignment Instructions

All Fan Creations Collegiate Strollers are constructed to be sturdy yet light and easy to maneuver. Occasionally the stroller may experience slight flexing of the frame during shipping. This may cause a front wheel to not touch the ground when unpacked. This is easy to remedy by following one of the instructions we have included.

Figure 1

Place your hand on the leg that is not touching the surface and slowly place your weight to bend the leg back into place. Test the alignment after the adjustment is made. Apply the same procedure until all wheels contact the surface.

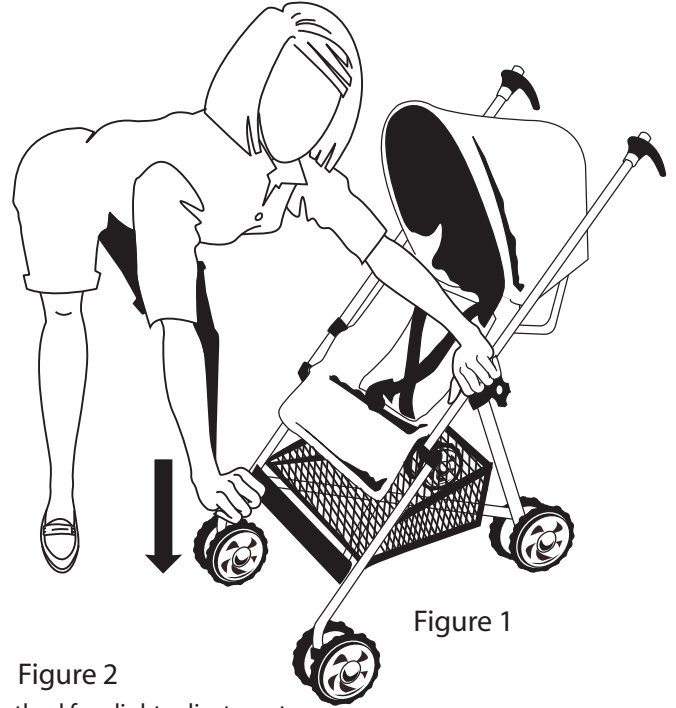


Figure 1



Figure 2

Figure 2

An alternate method for slight adjustment of the leg is by leaning the stroller with the leg that has the wheel not touching and pressing slightly against the door. Place your hand on the leg that is touching the ground and slowly place your weight to bend the leg back into place.



Figure 3

Facing the front of the stroller, place your hand on the stroller wheel and axle of the stroller. Slowly twist the wheel and axle towards the tire that is not touching.

Figure 3



If any parts are missing or you require technical assistance, do not contact your retailer, please contact Fan Creations via E-mail at [support@fancreations.com](mailto:support@fancreations.com) or check our web site at [www.fan-creations.com](http://www.fan-creations.com) for our Support Department. Please also refer to our support part for instructional video clips.