



Headboard Instructions


www.fan-creations.com

Parts List

- Left post
- Right post
- Back logo support bar
- Top slotted cross bar
- Lower cross bar
- Headboard panel


Hardware

- 4 Hex bolt and cross dowel
- 4 wooden dowels
- 3 small screws
- 6 large screws

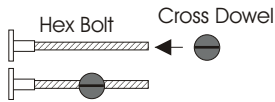

Cross Dowels fit in their holes with the slot aligned with the bolt.

Diagram 1

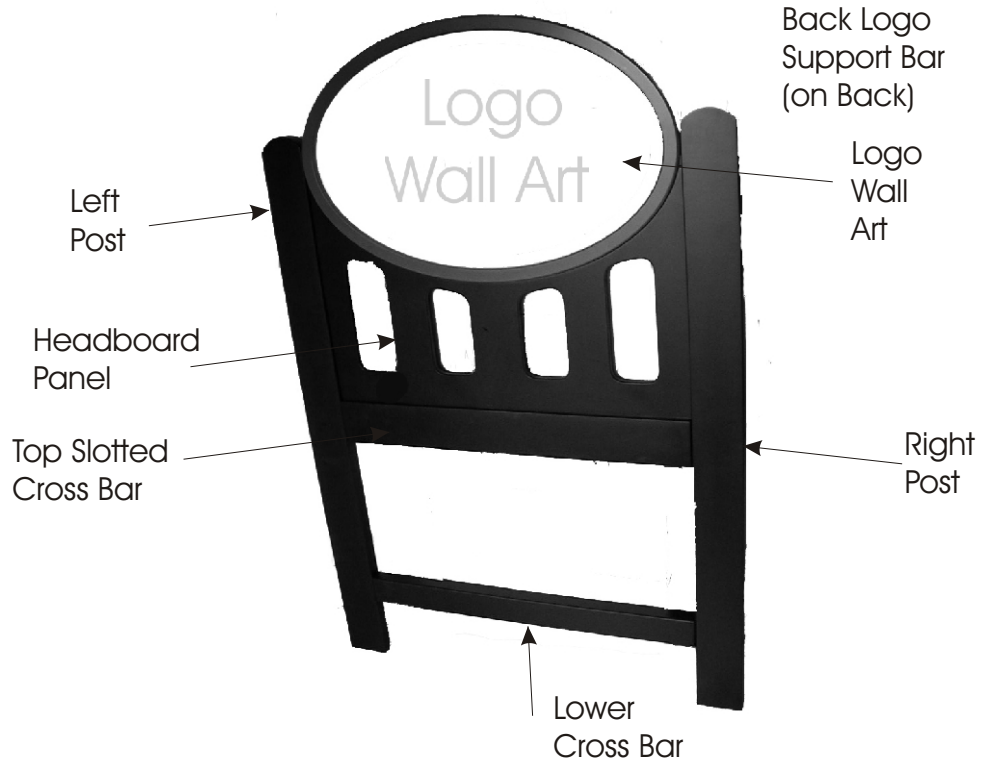

Read all directions prior to assembly.

Headboard Assembly

- Step 1:** Place the left post down on the floor with the top notch facing upward (See Diagram 2).
- Step 2:** Lay down the top slotted cross bar with the holes facing upward. Place wood dowel inside top slotted cross bar (both sides) and fit the other half of the wooden dowel into the left post. Place the cross dowel inside the hole of the top slotted cross bar. Place the bolt through the hole of the left post and tighten with a hex wrench.
- Step 3:** Place wooden dowels in the top of the lower cross bar. Line-up lower cross bar with the left post. Place the cross dowel inside the hole of the lower cross bar. Place the bolt through the hole of the left post and tighten with a hex wrench.
- Step 4:** Place headboard panel in slot of top slotted cross bar and right post. Repeat steps 1 through 3 for the right post.
- Step 5:** Screw in back logo support bar into the back with four long screws.
- Step 6:** Place logo wall art in the headboard panel. Make sure the wall art is centered. Screw in the three short screws in the headboard panel into the logo wall art. Screw in the two long screws into the back logo support bar. **MAKE SURE YOU USE THE CORRECT SCREWS OR WALL ART COULD BE DAMAGED.**

Diagram 2



Diagram 3



If any parts are missing or you require technical assistance, do not contact retailer. First check our web site at www.Fan-Creations.com under the support tab. If you do not find the answer to your question there, contact Fan Creations support at 678-933-3458.



www.fan-creations.com

Headboard Instructions (Mount to metal frame)

Step 1: Headboard must be mounted on metal frame.

Step 2: The back of the headboard must be placed against the wall for support IT IS NOT INTENDED TO BE FREE STANDING.

Step 3: Cut out Template 1.

Step 4: After assembly of the headboard, place the headboard behind the metal frame.

Step 5: A metal bracket is welded to your existing metal frame. Use the template to mark the bracket location and holes.

Step 6: Remove template and place on the headboard post. Mark holes on headboard.

Step 7: Drill holes in the headboard. The diameter of each bolt will vary on the metal bracket holes. Bolts should be greater than 1/4 inch with length of 2. DO NOT MOUNT with screws - must be bolted.

Step 8: Bolt headboard to metal frame.

Step 9: Place headboard back against wall.

Cut-Out

Template 1

Dimensions of left post and metal bracket on common metal frame

Fold

Fold

Cut-Out

Metal Bracket

Cut-Out

← 1.5 inches →

← 4 inches →

Cut-Out